ASTORIA

ASSEMBLY INSTRUCTIONS

2-WAY 2FT :: 257-FF-2W-2F

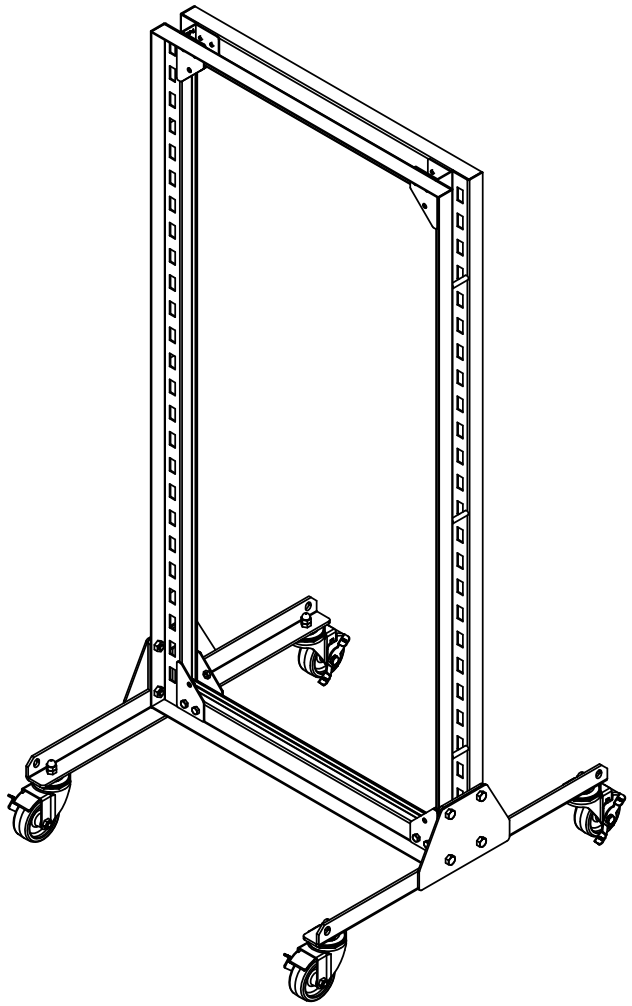

PART LIST:

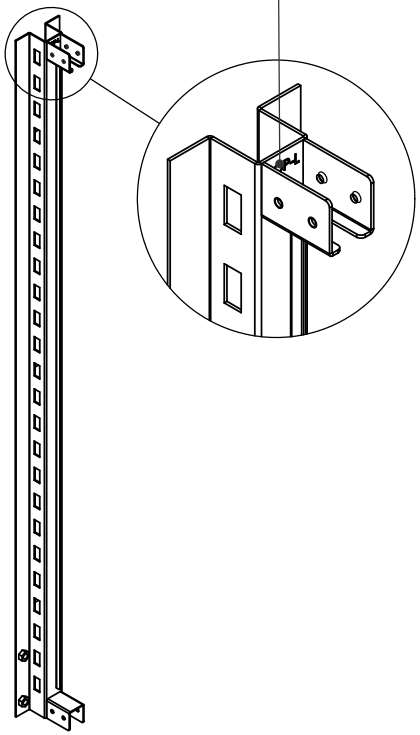

1X. LEFT UPRIGHT

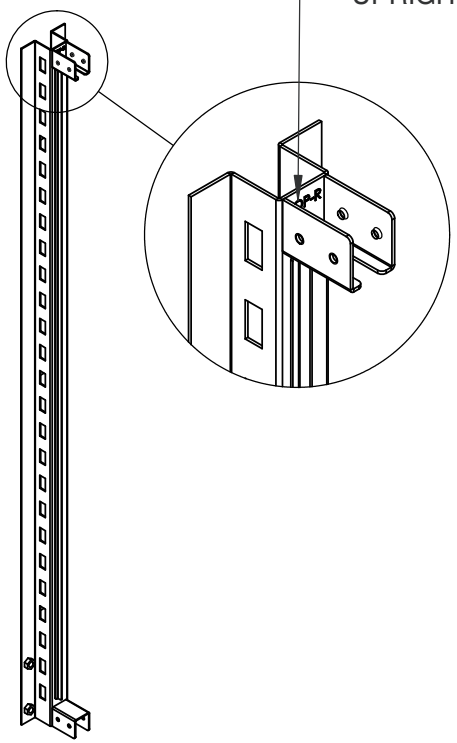

1X. RIGHT UPRIGHT

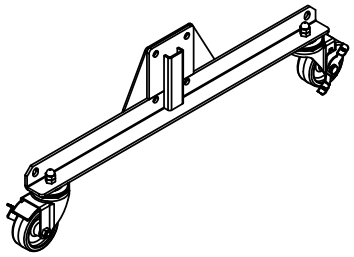

2X. LEG

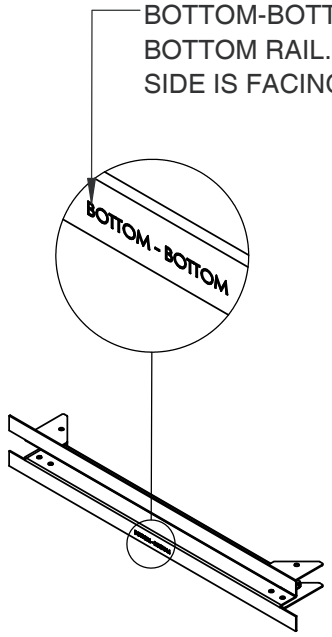

1X. BOTTOM RAIL

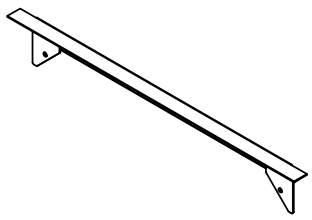

2X. TOP RAIL

16X. HEX BOLT 1/4"-20 X 0.4375"



8X. HEX BOLT 3/8"-16 X 0.75"

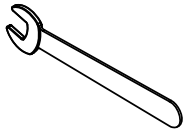

1X. OPEN END WRENCH
FOR 1/4"-20

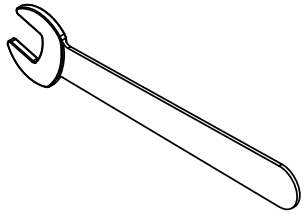

1X. OPEN END WRENCH
FOR 3/8"-16

BEFORE YOU BEGIN BUILDING AN ASTORIA FRAME :

Follow these three steps:

1. **Step One:** Lay out your uprights and rails and hand-tighten all corner hex bolts.

2. **Step Two:** Starting with opposite corners, align the uprights and rails at the corners. Then begin tightening the hex bolts with a wrench. Hold each corner square as you tighten. Do not fully tighten the bolts at this stage, as the frame will need slight flexibility for adjustment.

   TIP: If using a 24" accessory, such as a shelf or hang rail, test fit it now to confirm proper frame alignment and spacing.

3. **Step Three:** Once the frame is properly aligned, return to the opposite corners and fully tighten all hex bolts securely.

Pro Tip: For ease of assembly, begin building the Astoria frame on the floor by laying out the uprights and rails to align corners.

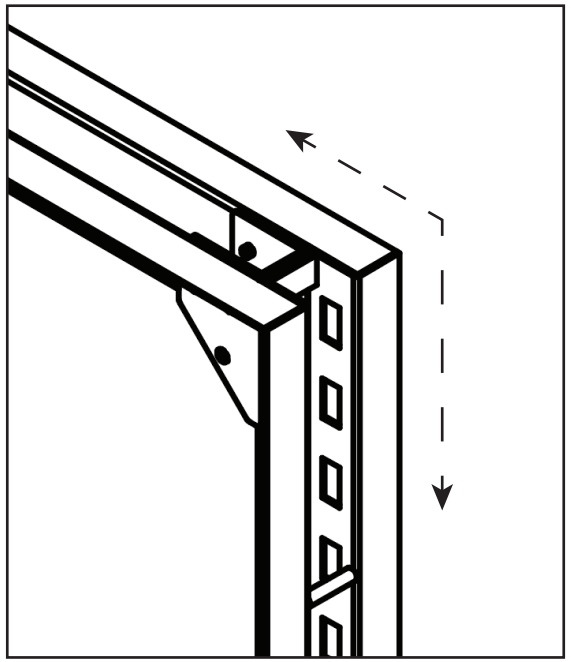

Corners must be square to ensure proper alignment.

STEP 1:

ORIENT UPRIGHTS USING
THE GUIDE ON PREVIOUS PAGE.

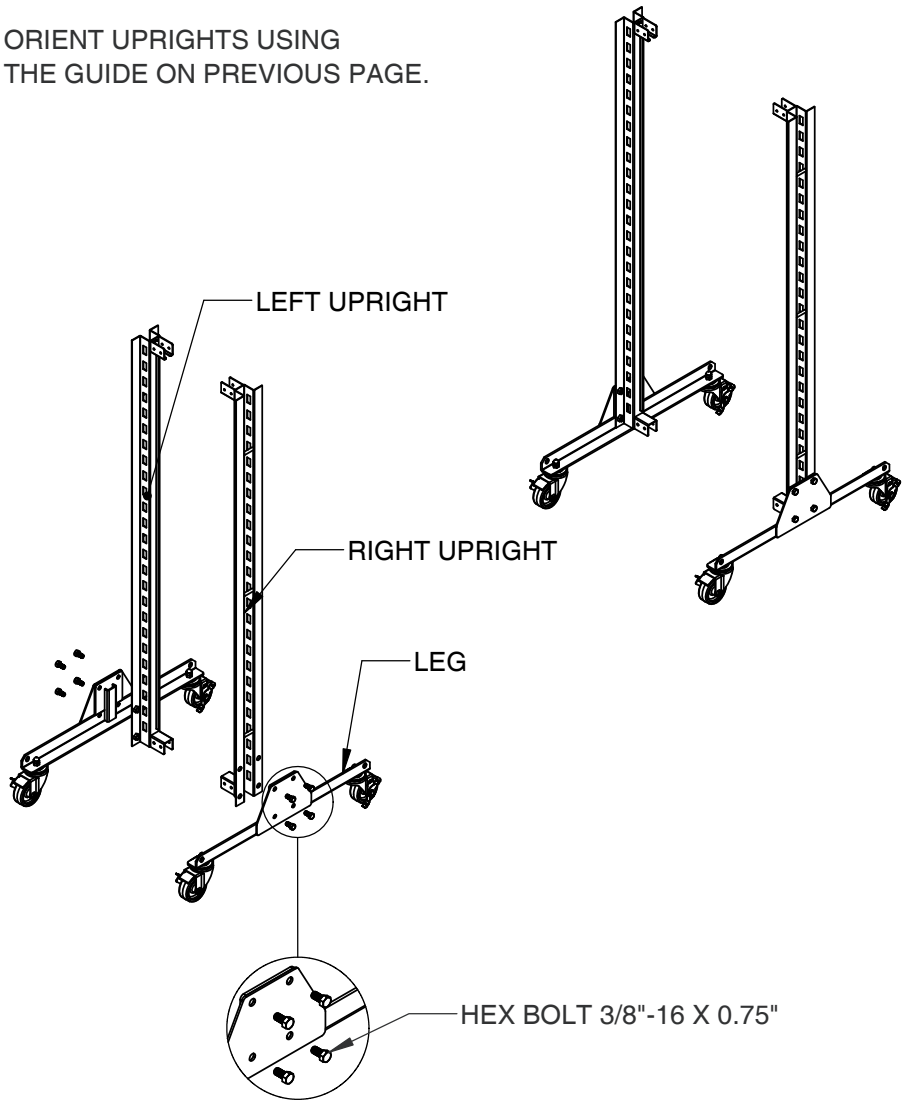

STEP 2:

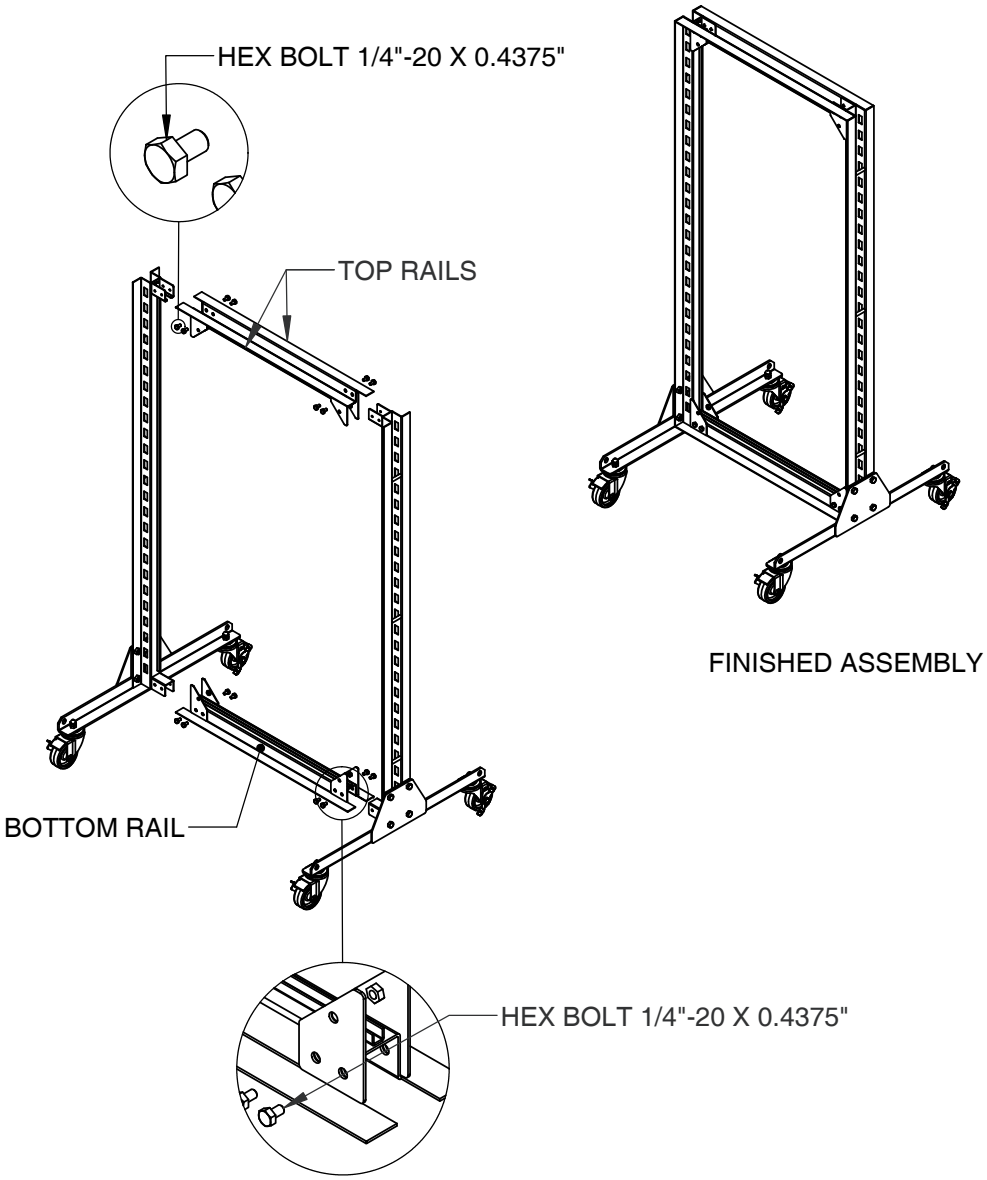

STEP 3: W/ OPTIONAL CROSS BRACES

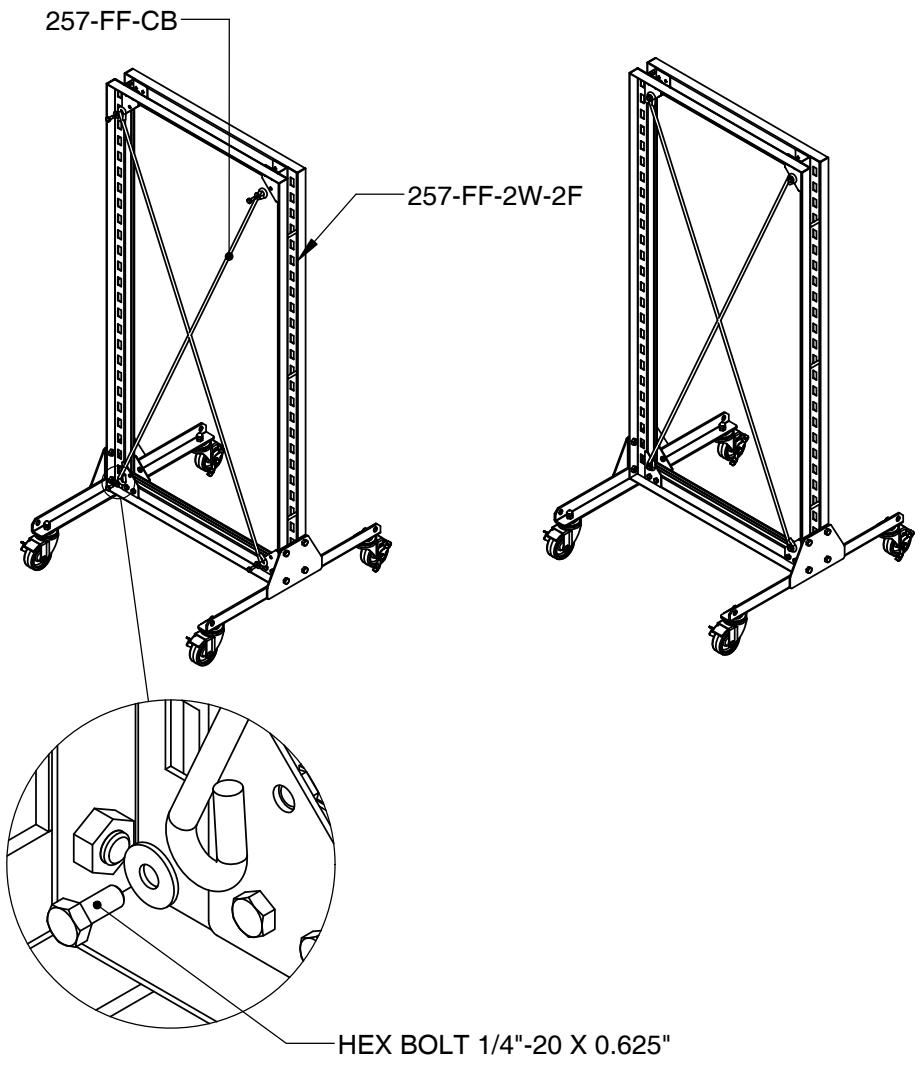
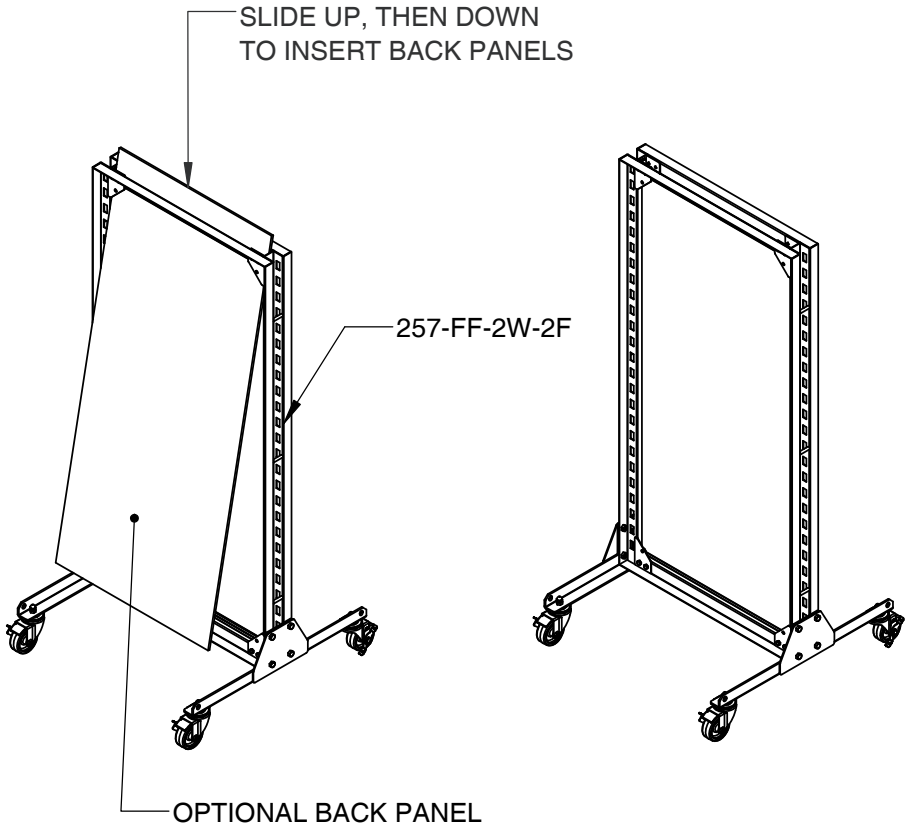
STEP 3: W/ OPTIONAL BACK PANELS