





GRAND + BENEDICTS

ASSEMBLY
INSTRUCTIONS


WELLTOP REGISTER STAND :: 260-EC-WTRS

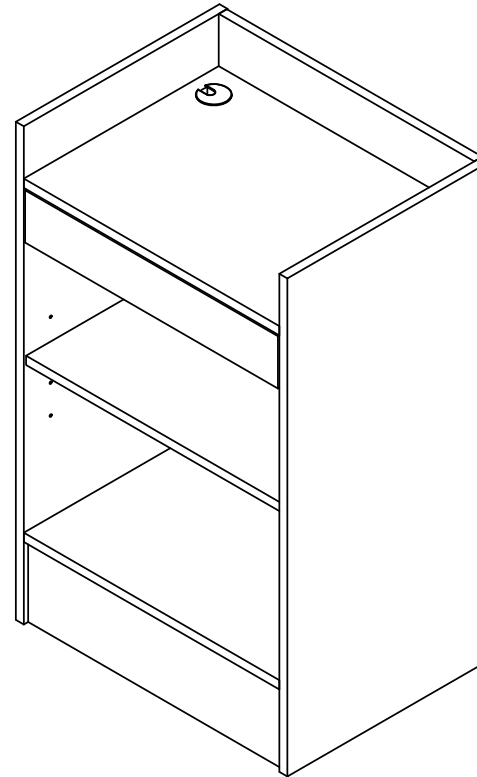


PART LIST:

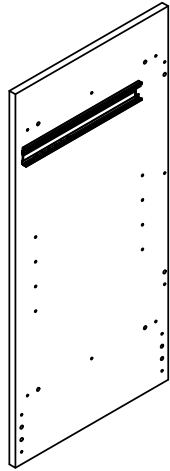


1X. SIDE PANEL - LEFT
W/ HALF GLIDE

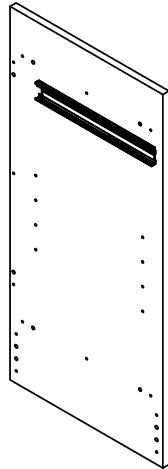


1X. SIDE PANEL - RIGHT
W/ HALF GLIDE

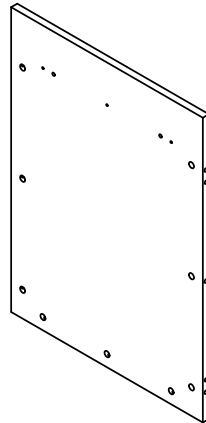


1X. BACK PANEL

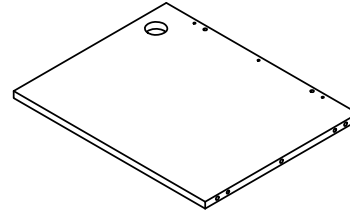


1X. BOTTOM PANEL

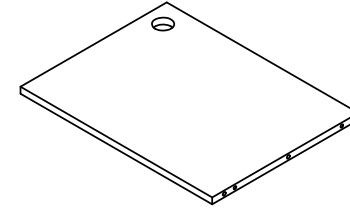


1X. TOP PANEL

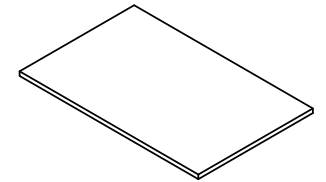

1X. DRAWER BOTTOM

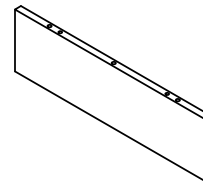


2X. KICK PANEL

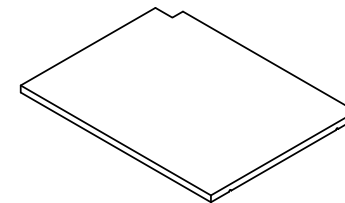


1X. SHELF




14X. FLAT HEAD-SELF-TAPPING
SCREW #8 X 25MM

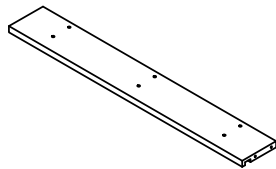


1X. DRAWER FRONT

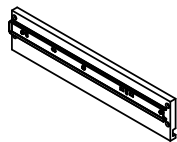

1X. DRAWER SIDE - LEFT
W/ HALF GLIDE

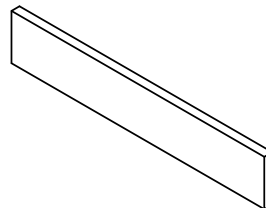


1X. DRAWER FACE




28X. WOOD DOWEL




6X. CROSS PAN HEAD WOOD
SCREW #6 X 10MM

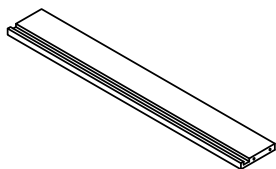

1X. DRAWER BACK

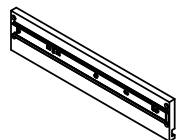


1X. DRAWER SIDE - RIGHT
W/ HALF GLIDE

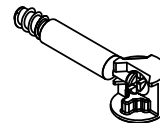

38X. CAMLOCK



4X. SHELF PIN

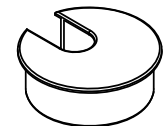


2X. GROMMET

STEP 1:


ASSEMBLE DRAWER BOX BY WOOD SCREWS;

- 1X. DRAWER FRONT
- 1X. DRAWER BACK
- 1X. DRAWER SIDE - LEFT W/ HALF GLIDE
- 1X. DRAWER SIDE - RIGHT W/ HALF GLIDE
- 8X. FLAT HEAD SELF-TAPPING SCREW #8X25MM

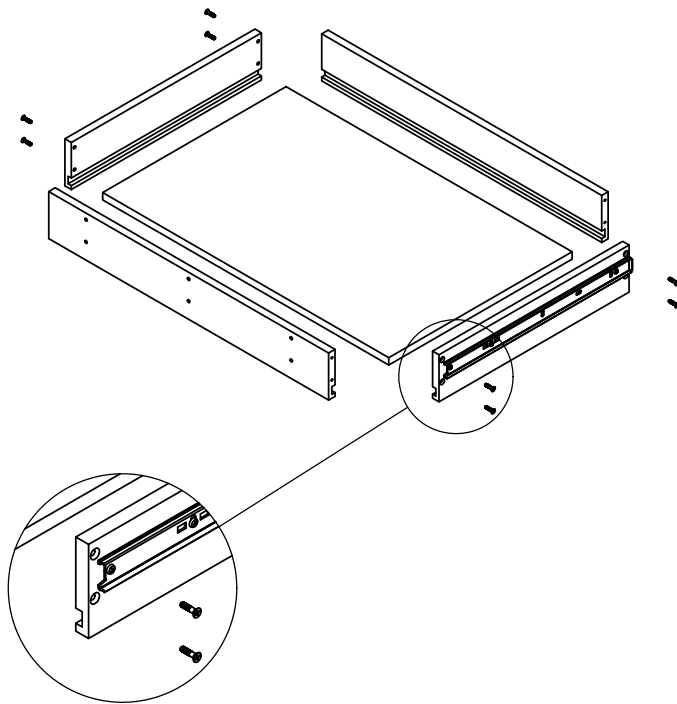**STEP 2:**

ASSEMBLE DRAWER FACE TO DRAWER BOX BY WOOD SCREW.


- 1X.DRAWER FACE
- 6X.FLAT HEAD SELF-TAPPING SCREW #8X25MM

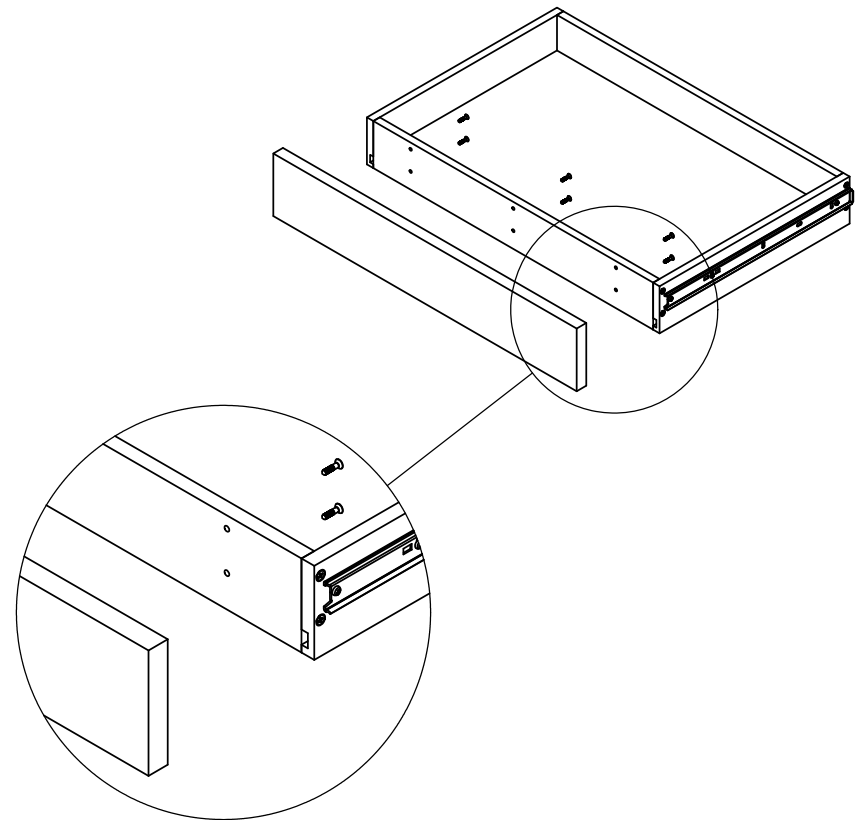

STEP 3:

1. SCREW THE BOLTS OF CAMLOCK & INSERT WOOD DOWELS INTO THE BOTTOM OF BOTTOM PANEL;
2. CONNECT KICK PANELS BY CAMLOCKS;


1X. BOTTOM PANEL
2X. KICK PANEL
4X. WOOD DOWEL
6X. CAMLOCK

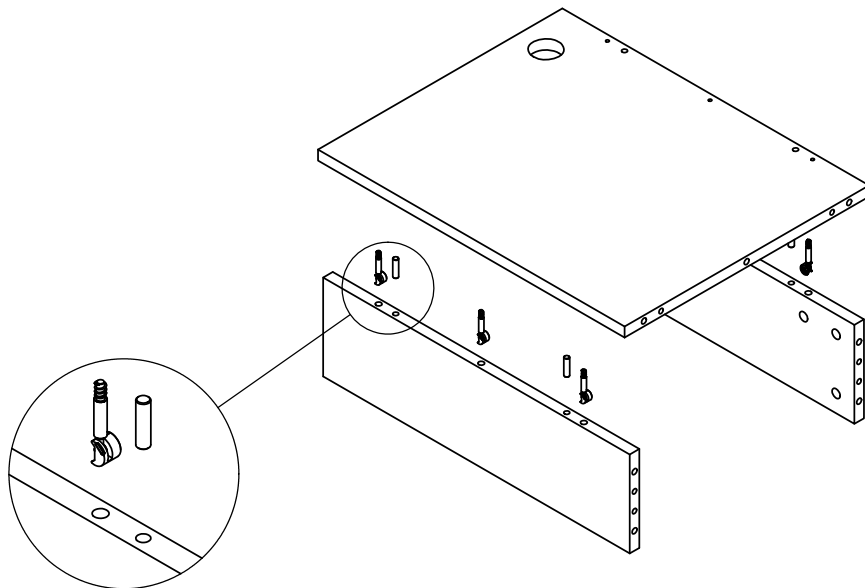

STEP 4:

1. SCREW THE BOLTS OF CAMLOCK & INSERT WOOD DOWELS INTO BASE, CONNECT BACK PANEL TO BASE BY CAMLOCKS;
2. SCREW THE BOLTS OF CAMLOCK & INSERT WOOD DOWELS INTO BACK PANEL CONNECT TOP PANEL TO BACK PANEL BY CAMLOCKS;


1X. BACK PANEL
1X. TOP PANEL
4X. WOOD DOWEL
6X. CAMLOCK

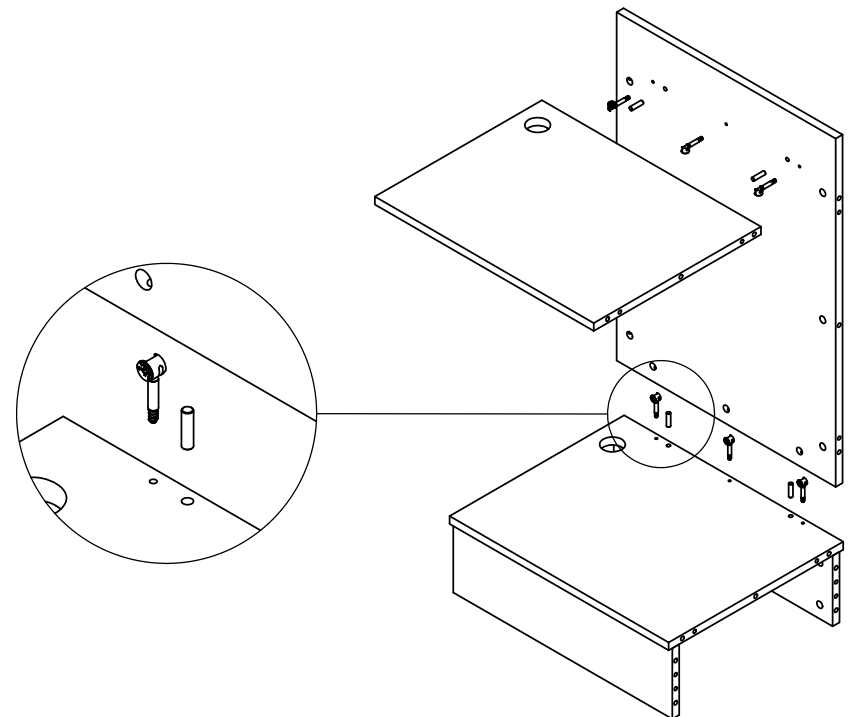

STEP 5:


1. SCREW THE BOLTS OF CAMLOCK INTO LEFT & RIGHT SIDE PANEL;;
INSERT WOOD DOWELS INTO BASE & BACK PANEL & TOP PANEL;
2. CONNECT LEFT & RIGHT SIDE PANEL BY CAMLOCKS;

1X. SIDE PANEL - LEFT W/ HALF GLIDE
1X. SIDE PANEL - RIGHT W/ HALF GLIDE
20X. WOOD DOWEL
26X. CAMLOCK

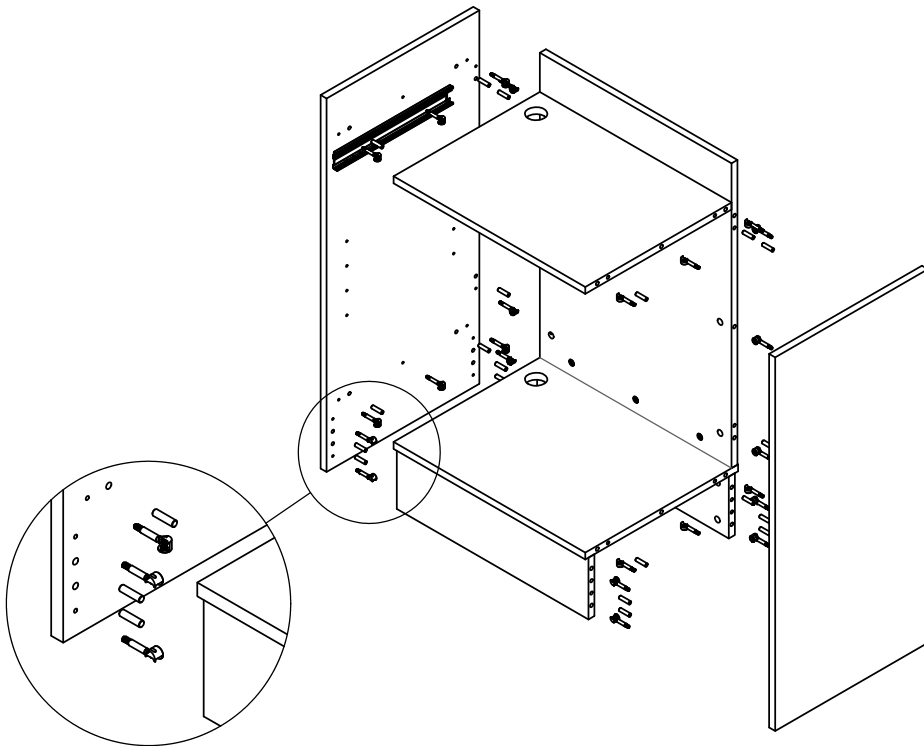**STEP 6:**

1. INSERT GROMMET INTO TOP PANEL & BOTTOM PANEL;

2X. GROMMET

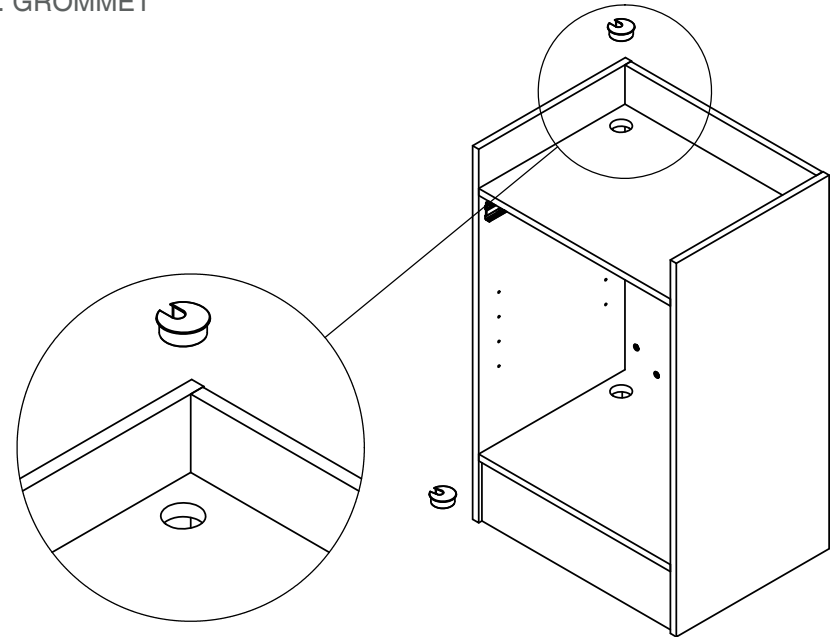

STEP 7:

1. INSTALL DRAWER TO CABINET;
2. INSERT SHELF PINS IN POSITION, SIT SHELVES ON SHELF PINS;

1.X DRAWER - ASSEMBLY

1.X SHELF

4.X SHELF PIN

