

BURNSIDE


ASSEMBLY INSTRUCTIONS

CASHWRAP CORNER UNIT // 292-CW-CU-K

Made of 1¼" square tubing in metallic silver finish with an extra durable, scratch resistant coating.

Use with Burnside Cashwrap

28" D X 35-1/6" T

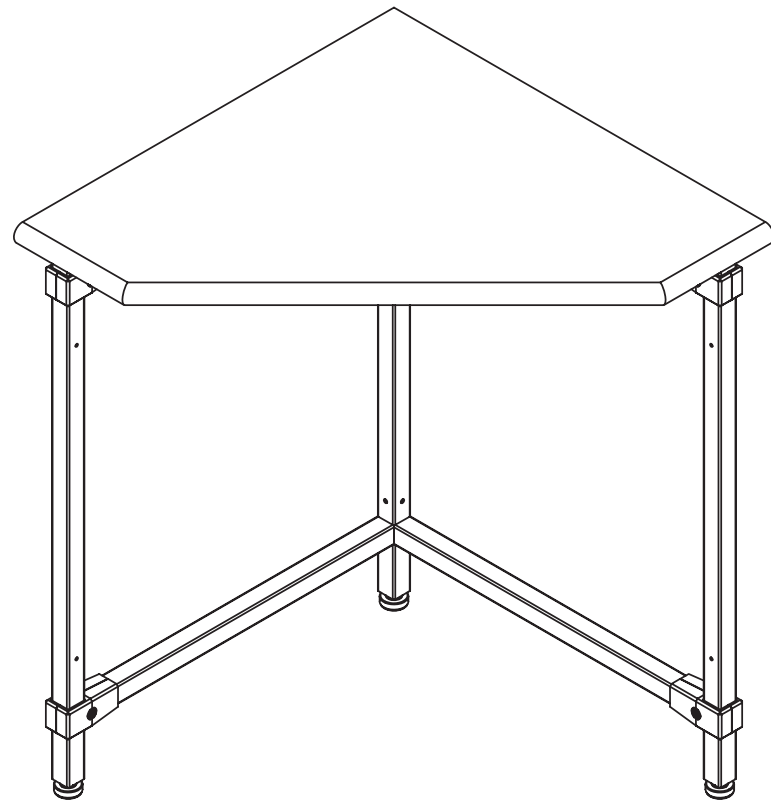

HARDWARE:


1. Main Frame - (1)
2. Main Frame Add-On - (1)
3. Counter Top - (1)
4. Joint Connector Bolts - 1/4"-20 X 20mm - (7)
5. 3/8"-16 X 1" Levelers - (3)
6. Connectors - (4)
7. Allen Key

STEP ONE:

Attach Main Frame (1) to Main Frame Add-On (2) with Joint Connector Bolts (4).

STEP TWO:

Clamp on the Connectors (6) and secure with Allen Key.

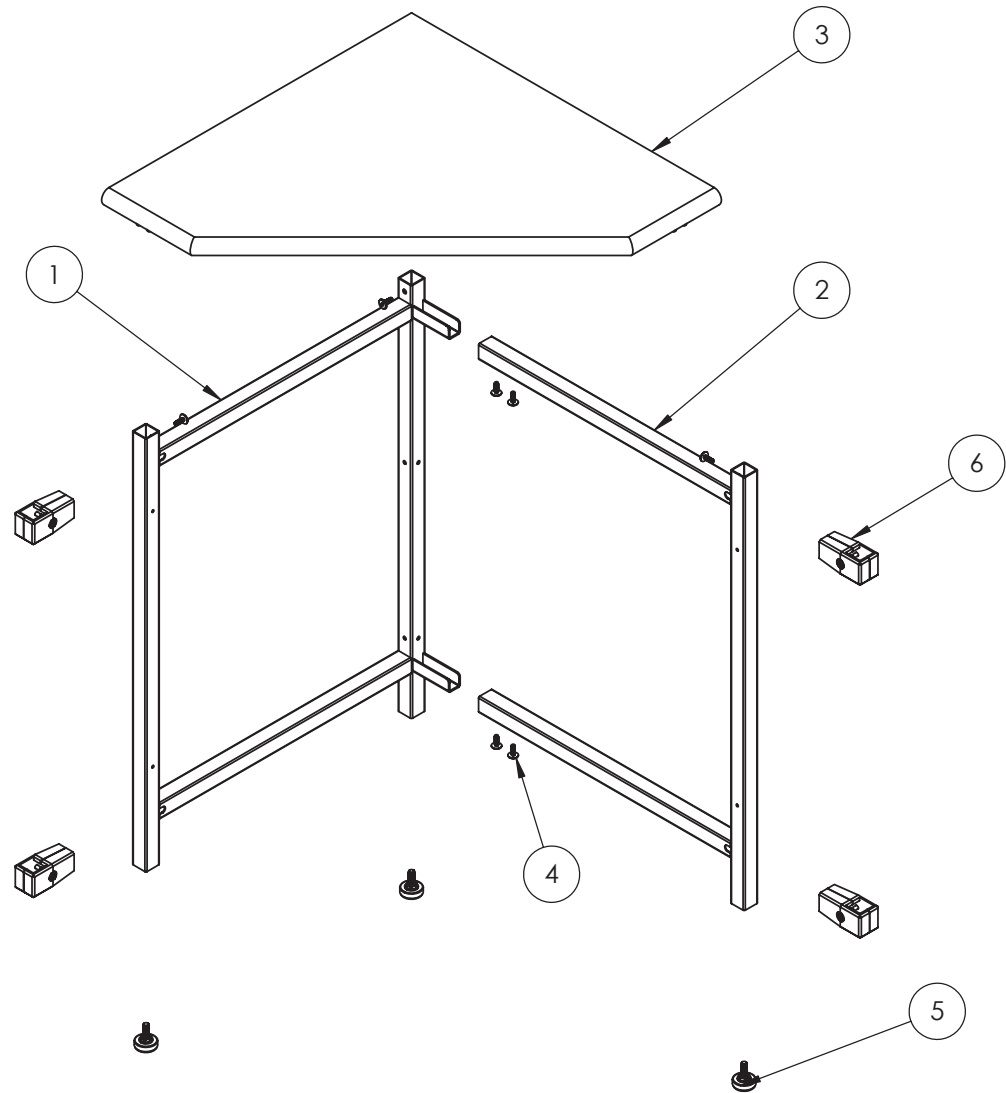

Note: Items not shown to scale.