


BURNSIDE

ASSEMBLY INSTRUCTIONS

UPRIGHT

// 292-W-UPRIGHT

Use to build a Burnside wall system.

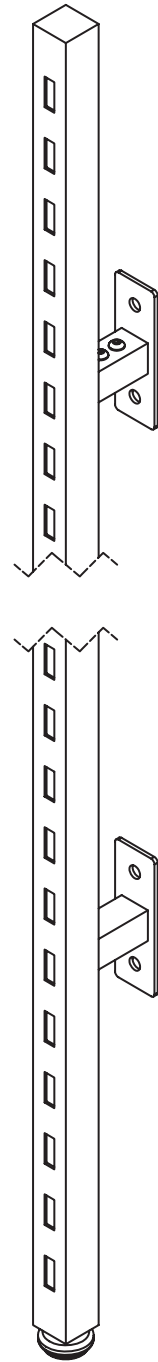

Please note that wall mounting screws are not included and it's the responsibility of the installer to select appropriate hardware. For accuracy and efficiency, we recommend that you use a Laser Leveler and professional installers for this job.


STEP 1: Before you start, determine what height you need to mount the wall mounting brackets. The uprights are supposed to be resting on the floor (not floating). The levelers have a few inches of play and can be used to even out an uneven floor.

STEP 2: Measure the wall and establish a starting point and two horizontal, level lines. Mark the the lines 24" on center.

STEP 3: Mount the two wall brackets for the first upright on a vertically level line 78" on center.

STEP 4: Attach the upright to the wall brackets with the screws provided. Adjust levelers as needed.

STEP 5: Mount the second set of wall brackets 24" on center and attach upright. Before moving on, use a Burnside shelf or a hangbar to test and ensure correct spacing.

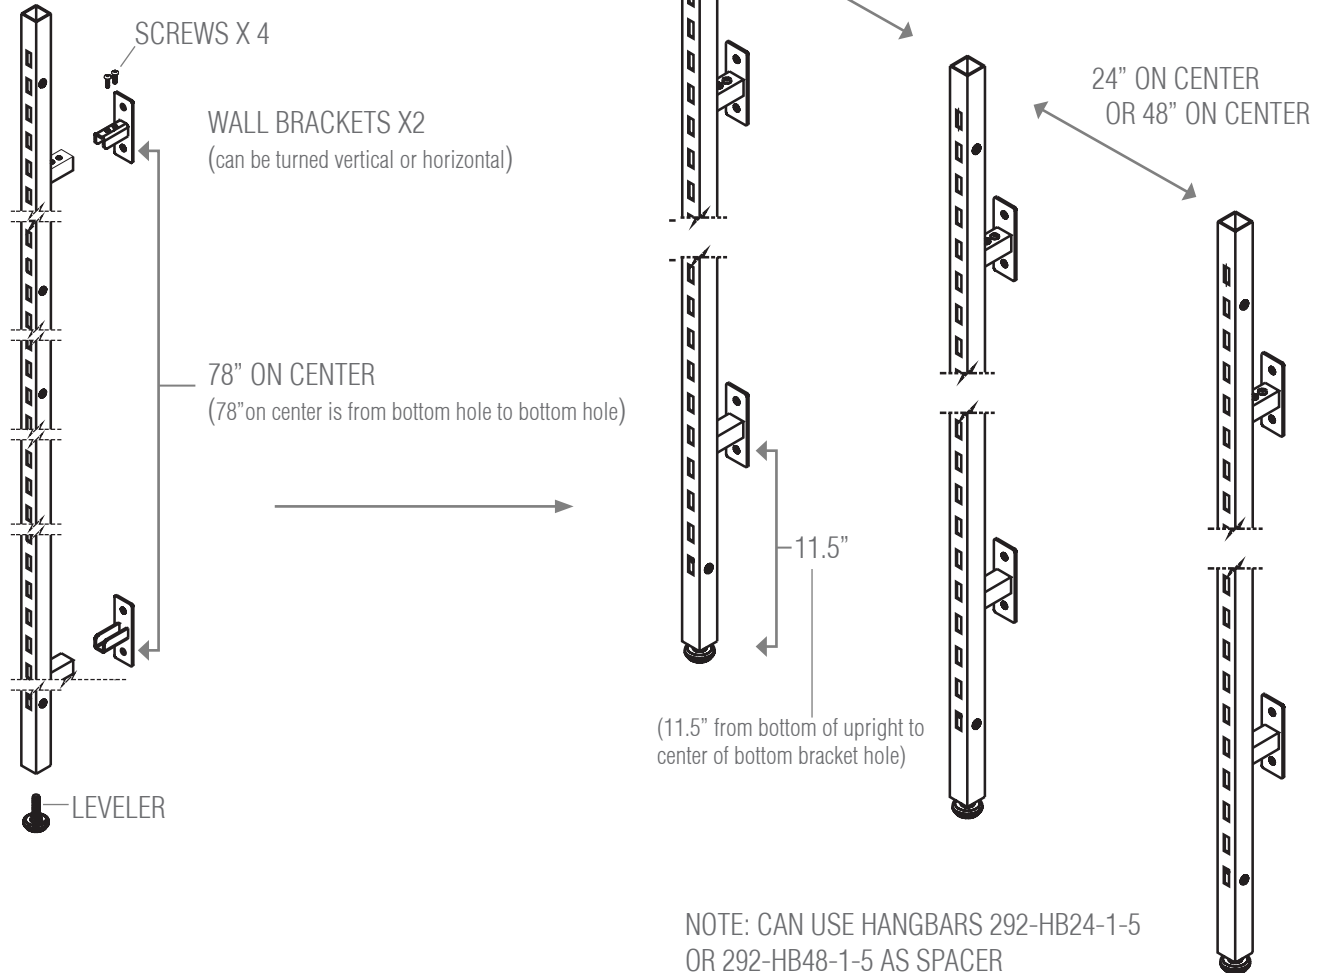

COMPLETED
FIXTURE



EXAMPLE:

