




ASTORIA
ASSEMBLY INSTRUCTIONS




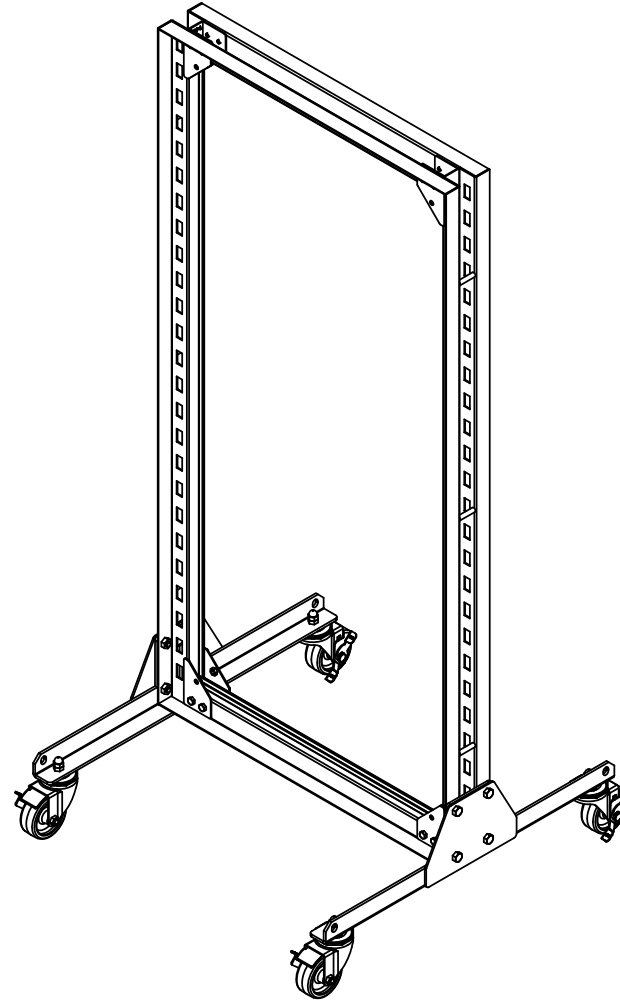


PART LIST:

TOP-L = LEFT
UPRIGHT

TOP-R = RIGHT
UPRIGHT

BOTTOM-BOTTOM =
BOTTOM RAIL. THIS
SIDE IS FACING DOWN

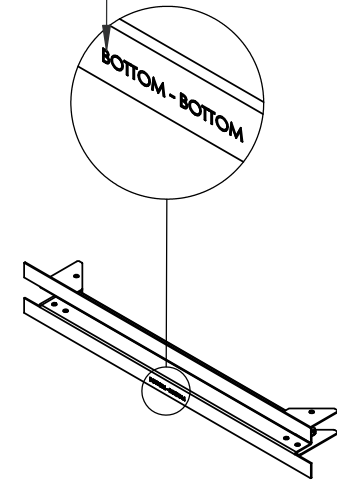
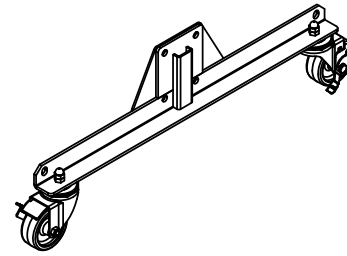
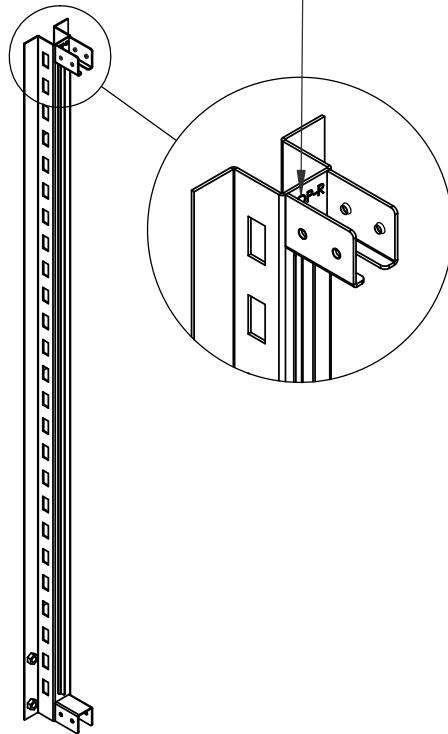
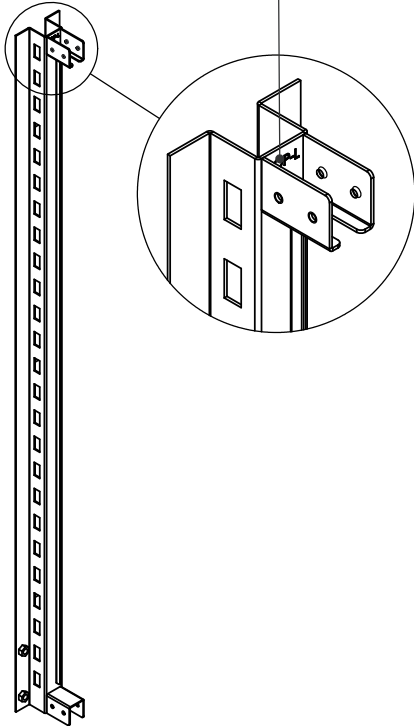


1X. LEFT UPRIGHT

1X. RIGHT UPRIGHT

2X. LEG

1X. BOTTOM RAIL

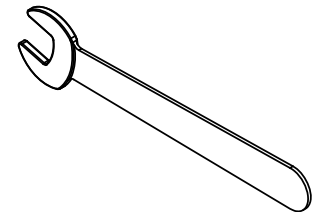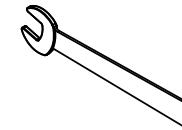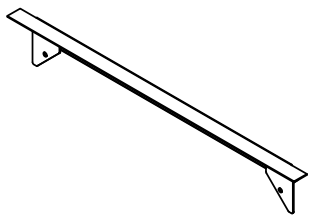

2X. TOP RAIL

16X. HEX BOLT 1/4"-20 X 0.4375"


8X. HEX BOLT 3/8"-16 X 0.75"

1X. OPEN END WRENCH
FOR 1/4"-20


1X. OPEN END WRENCH
FOR 3/8"-16

STEP 1:


ORIENT UPRIGHTS USING THE GUIDE ON PREVIOUS PAGE.

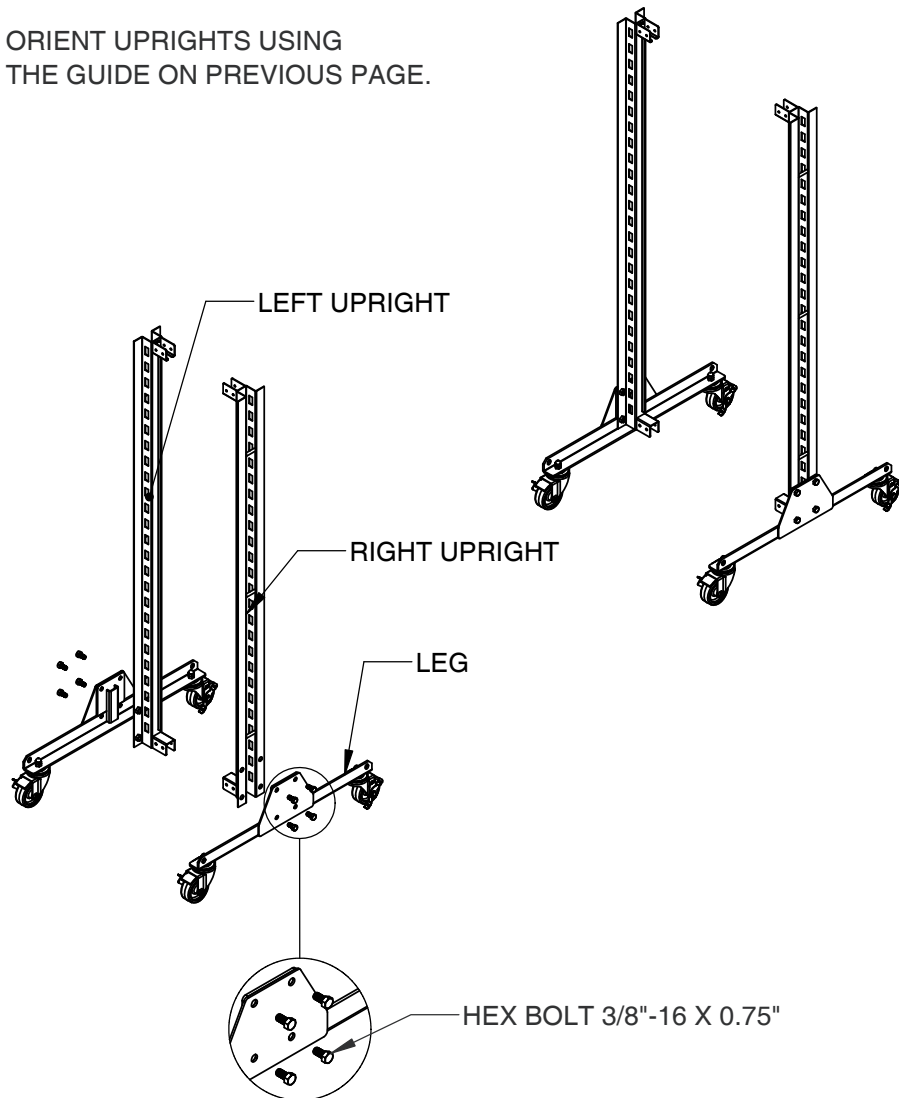


STEP 2:

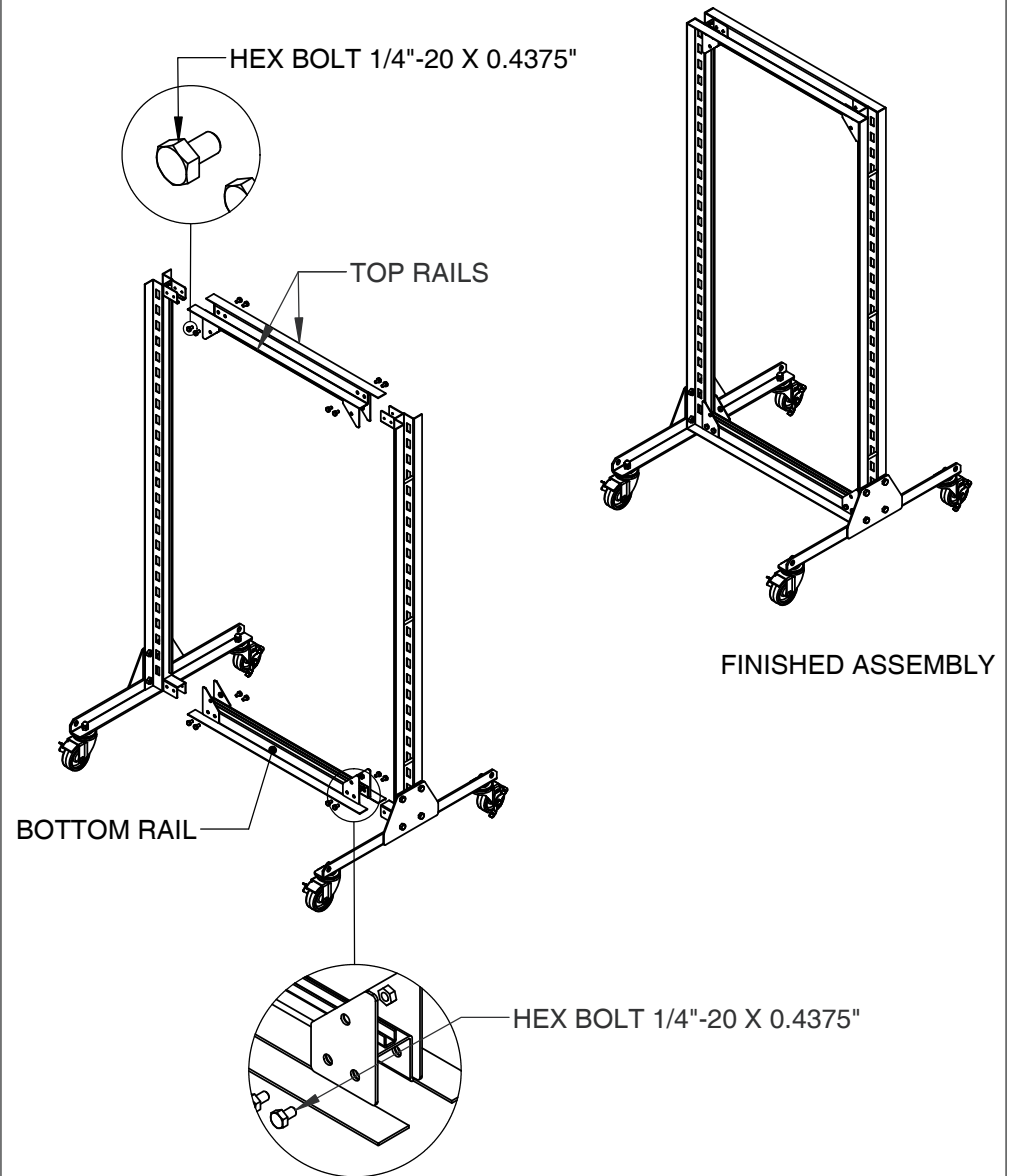

STEP 3: W/ OPTIONAL CROSS BRACES

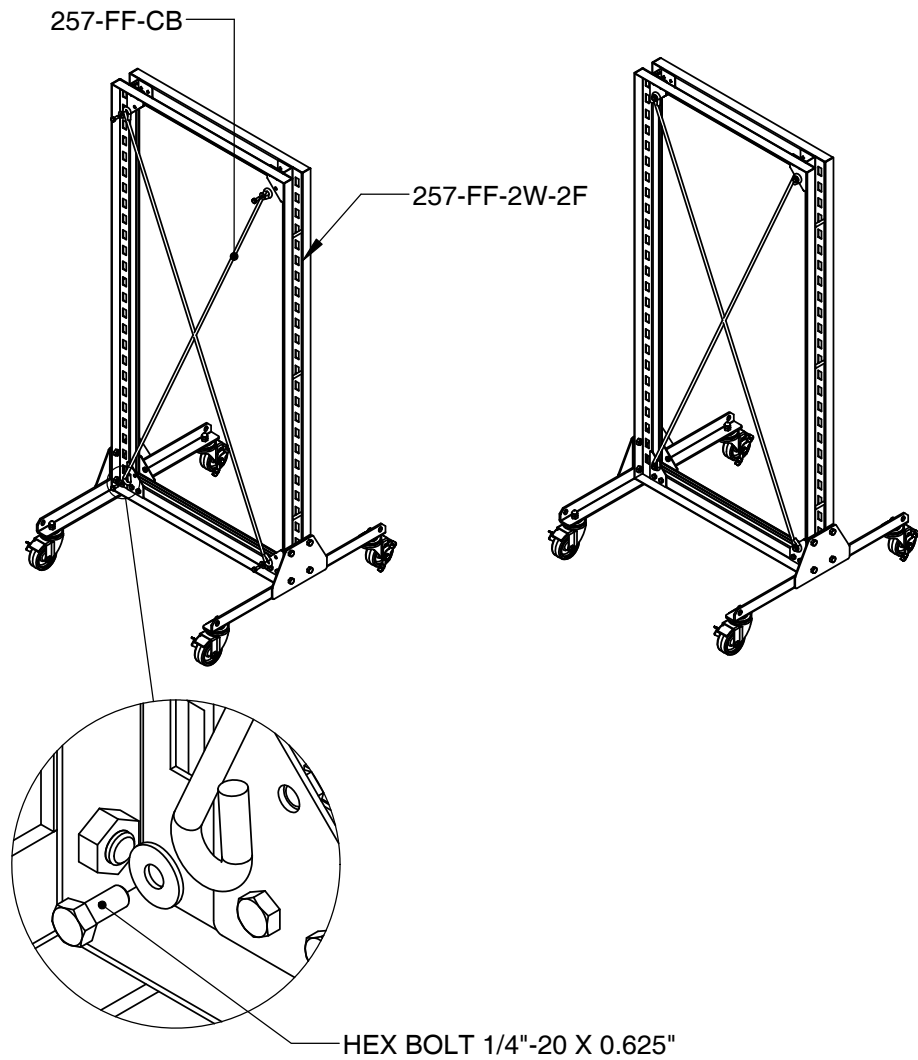


STEP 3: W/ OPTIONAL BACK PANELS

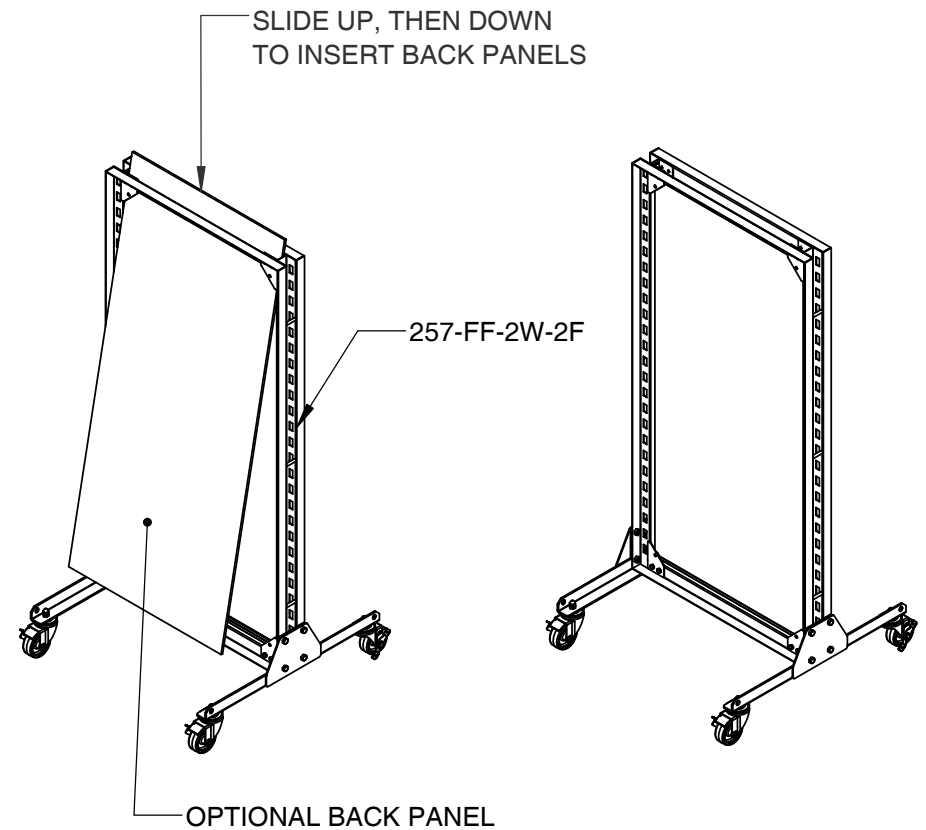




ASTORIA
ASSEMBLY INSTRUCTIONS

FLOOR END CAP :: 257-FF-EC

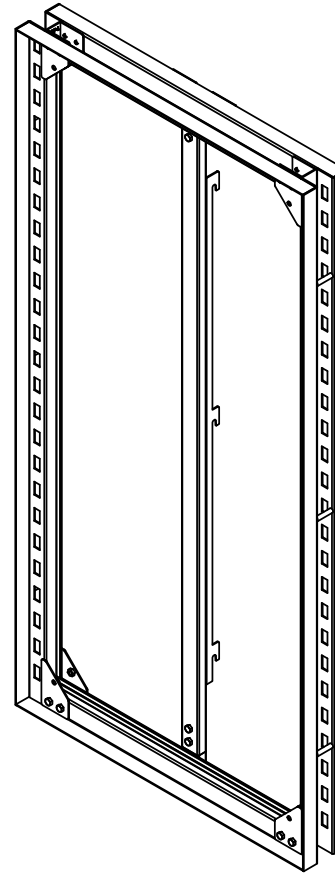


PART LIST:

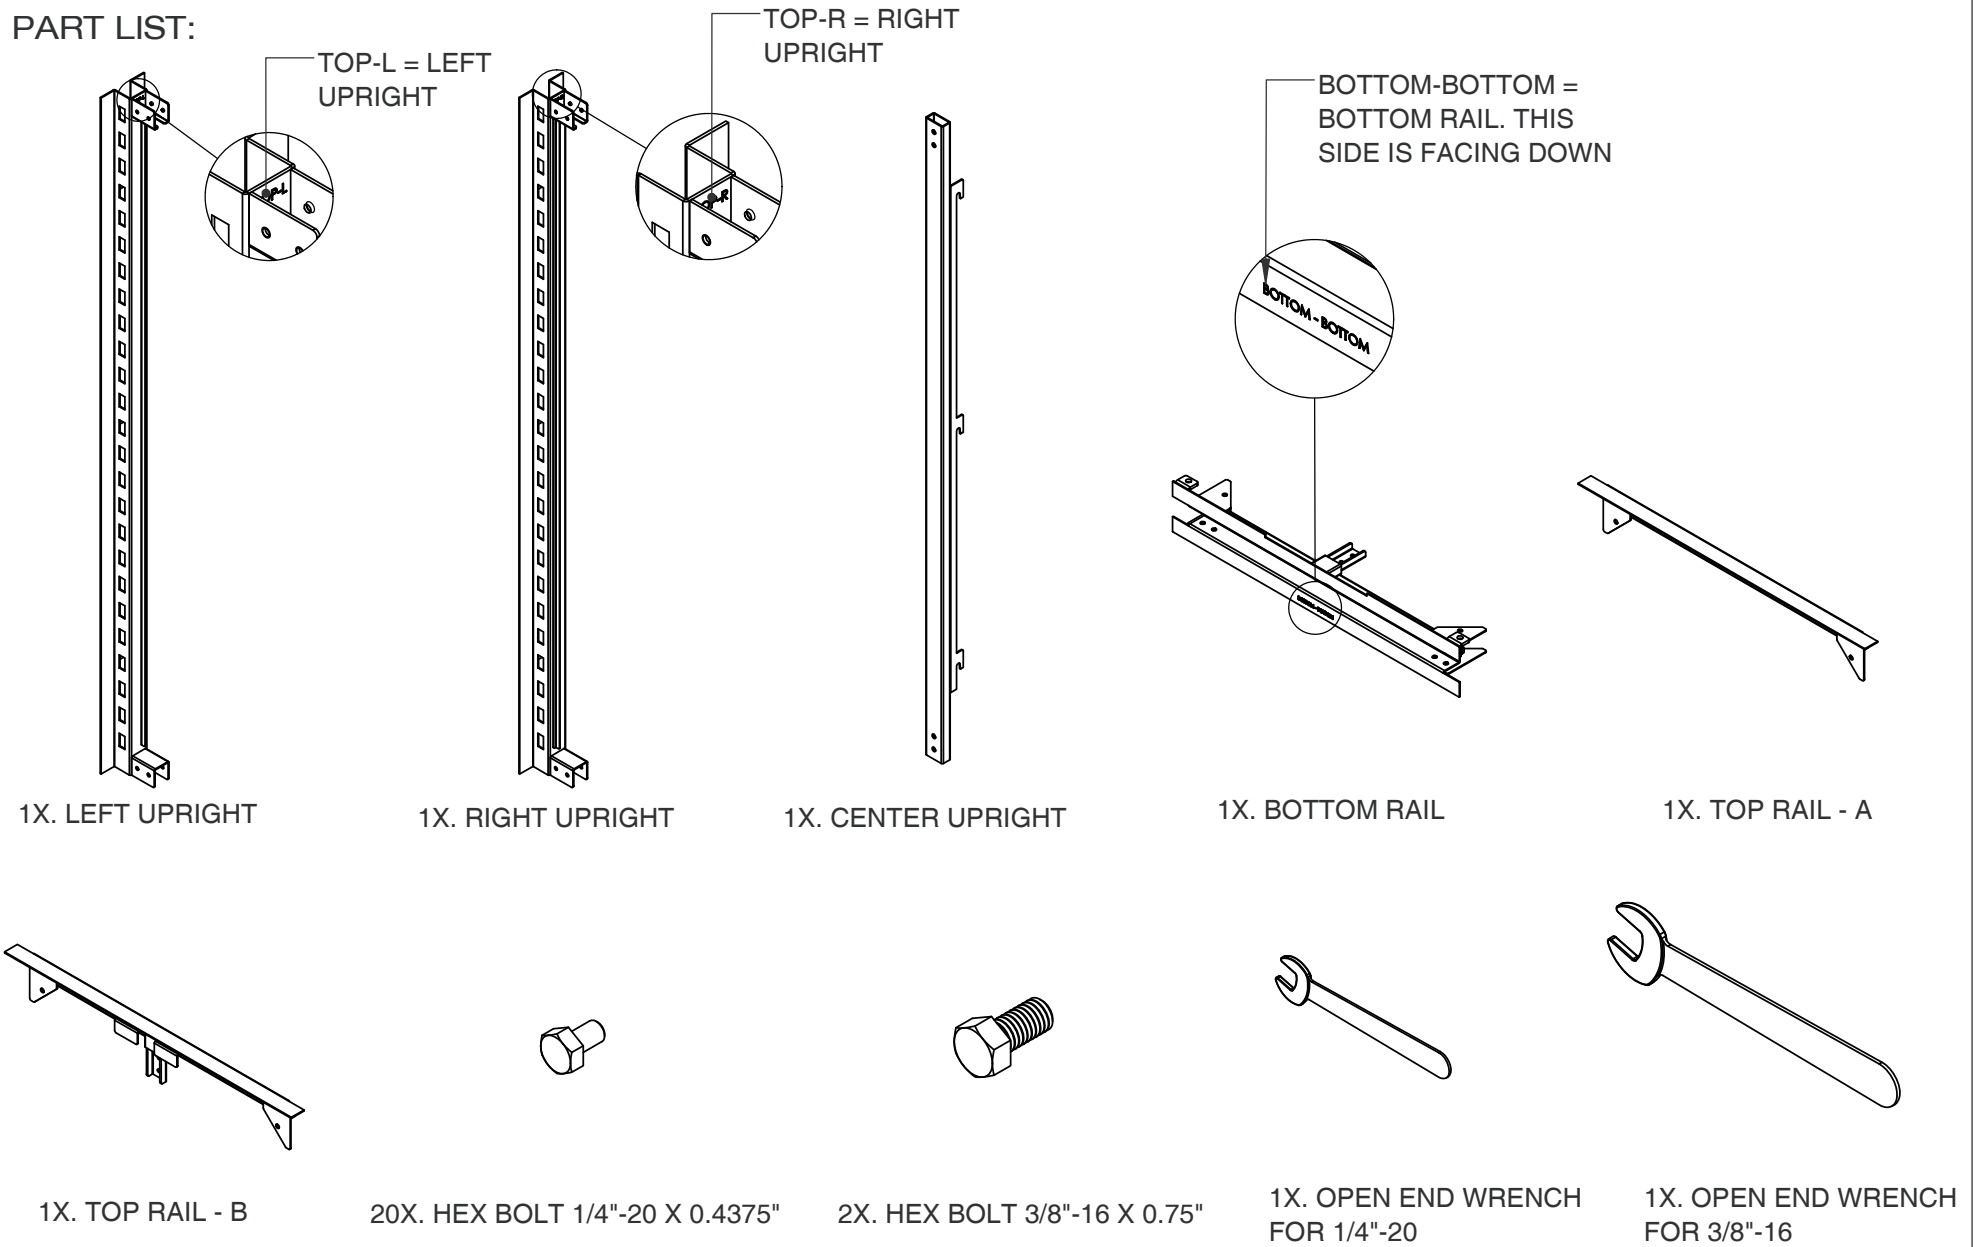

STEP 1:

ORIENT UPRIGHTS ACCORDING TO GUIDE ON PREVIOUS PAGE.

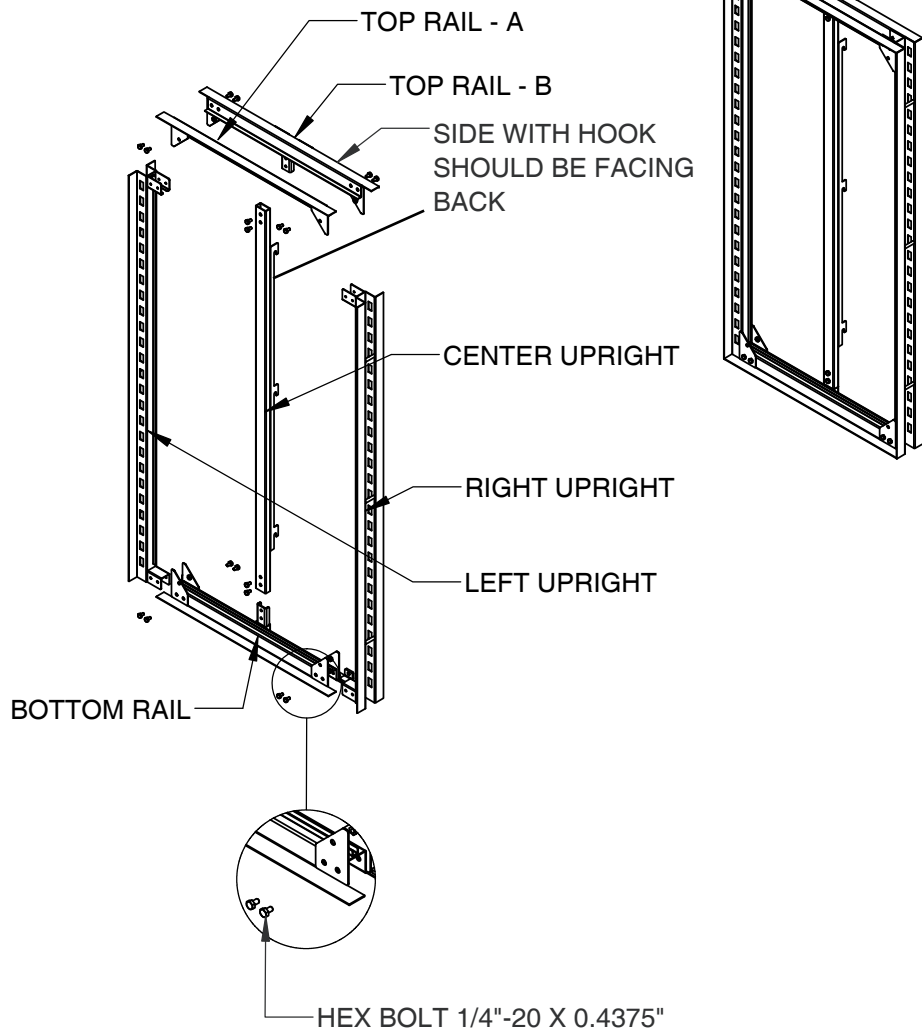

STEP 2:

