




ASTORIA

ASSEMBLY INSTRUCTIONS

2FT WALL :: 257-W-2

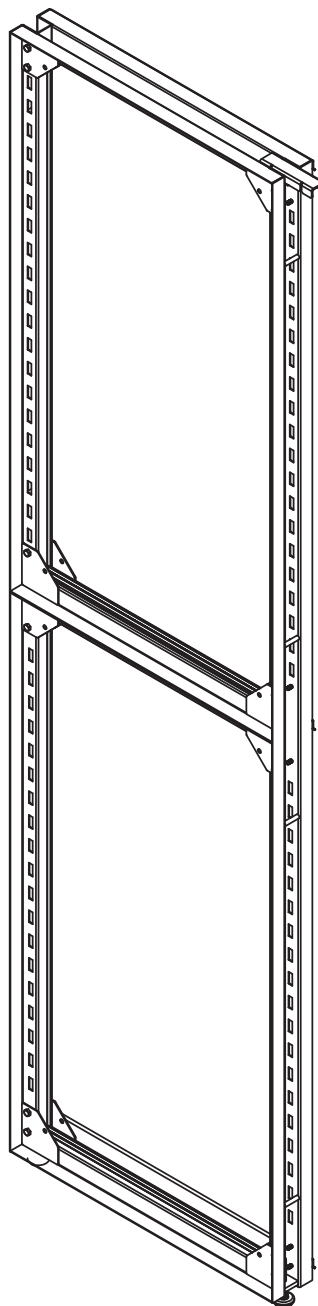


PART LIST:




1X. LEFT UPRIGHT
W/LEVELER




1X. RIGHT UPRIGHT
W/LEVELER

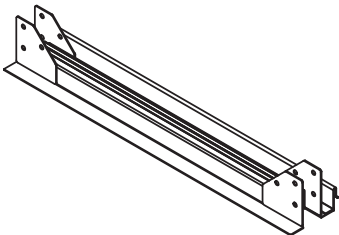


1X. BOTTOM RAIL

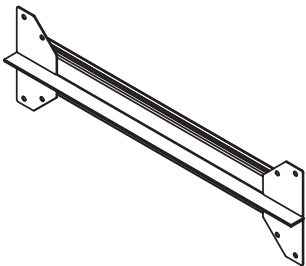


1X. CENTER RAIL A

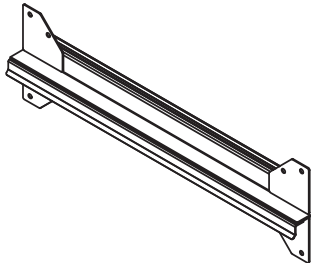


1X. CENTER RAIL B

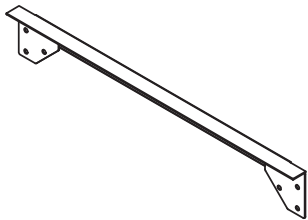


1X. TOP RAIL A

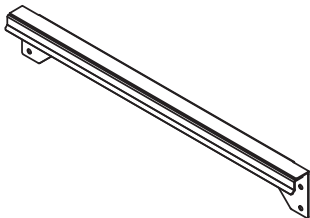

1X. TOP RAIL B

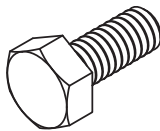

24X. HEX BOLT 1/4"-20 X 0.625"

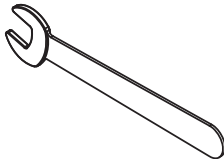


1X. OPEN END WRENCH
FOR HEX BOLT 1/4-20 UNC

START HERE

1. Identify the bottom of the Left and Right uprights by locating screw hole for attaching leveler. This indicates the bottom of these uprights. See Figure 1.
2. Configure your uprights so that the Offset Lips are closest to the wall. See Figure 2.

NOTE: The Offset Lips are where your back panels will rest. If lip is not lined up correctly, your back panels won't be able to slide in at installation.



Figure 1

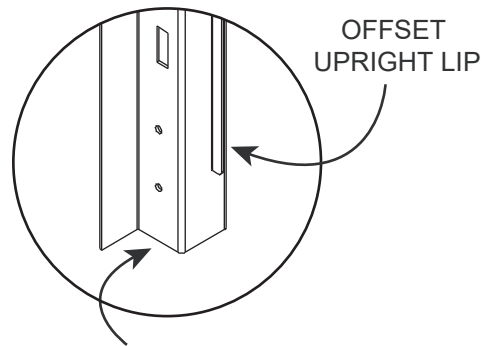


SCREW HOLE FOR ATTACHING LEVELER
INDICATES BOTTOM
OF LEFT & RIGHT UPRIGHTS

Figure 2

VIEW OF OFFSET LIPS ON
UPRIGHTS ALIGNED FROM THE TOP

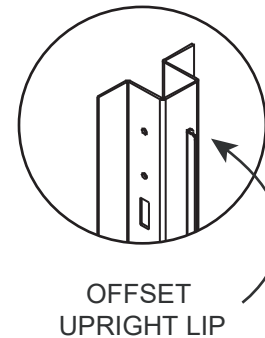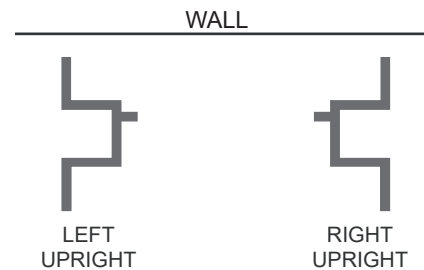


OFFSET
UPRIGHT LIP


LEFT
UPRIGHTRIGHT
UPRIGHT

DO NOT TIGHTEN BOLTS UNTIL YOU ARE 100% SATISFIED WITH YOUR ASSEMBLY AND ALIGNED THE LEVELERS.


STEP 1:

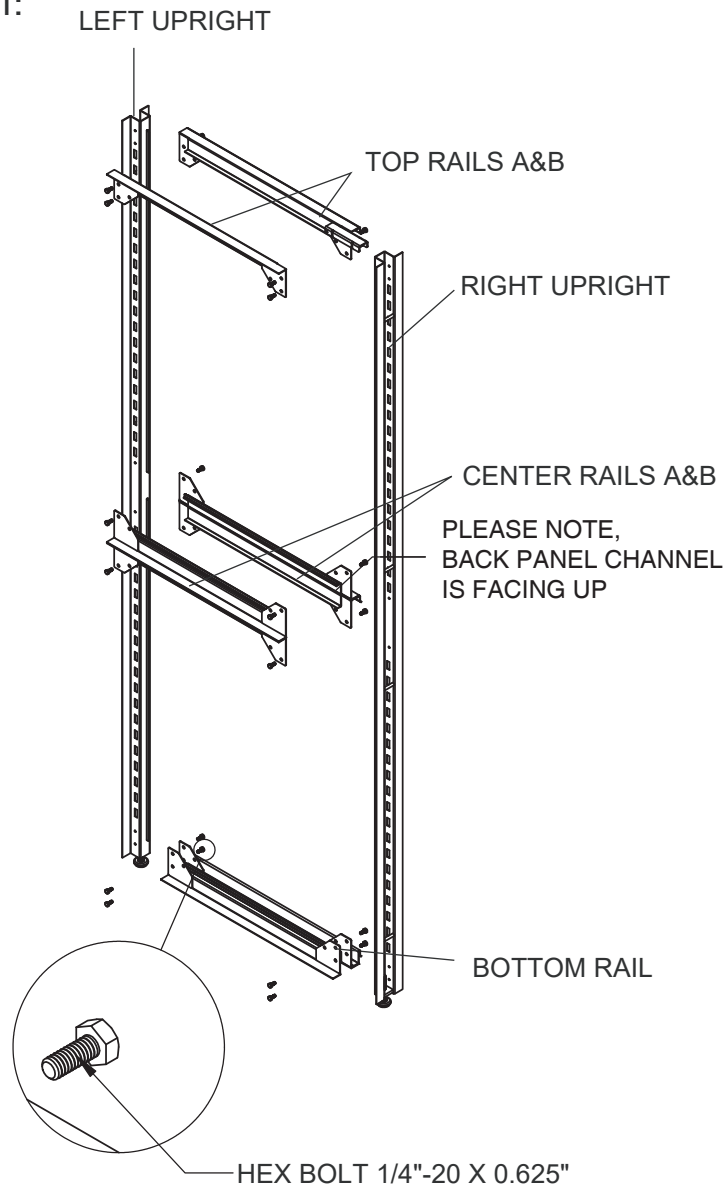

COMPLETED FRAME

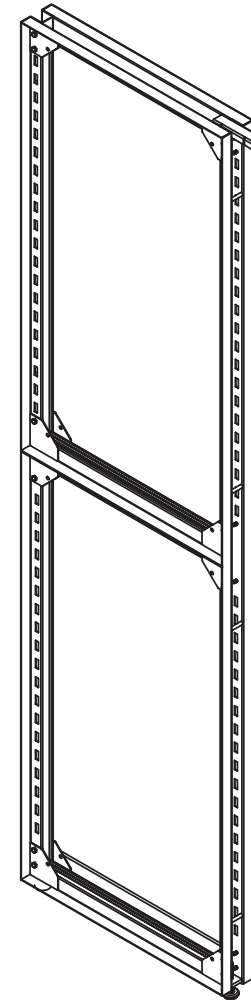


STEP 2: MOUNT WALL CLEATS


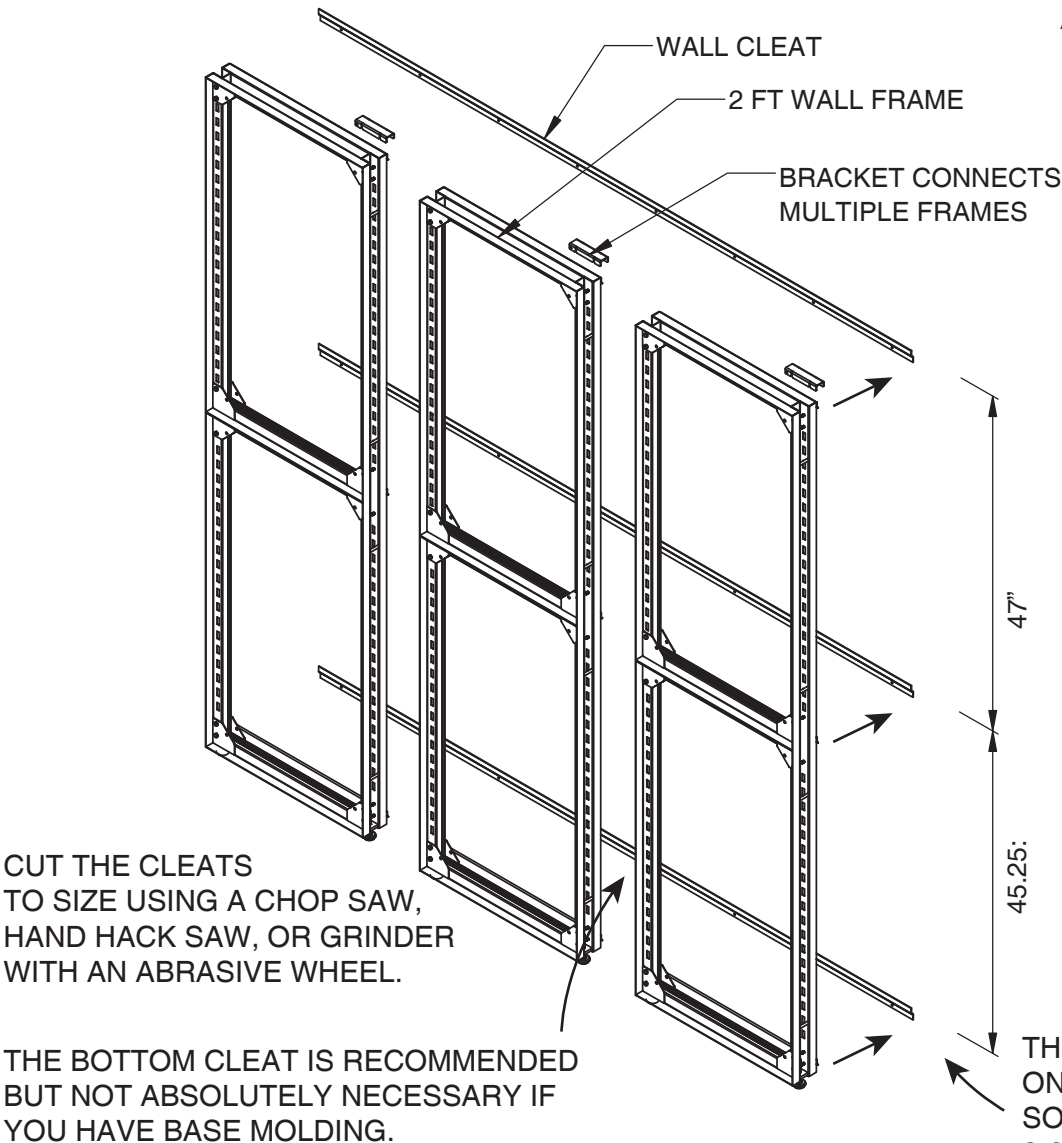


STEP 3: HANG WALL FRAMES

INSTALL CONNECTOR BRACKET AFTER INSERTING BACK PANELS

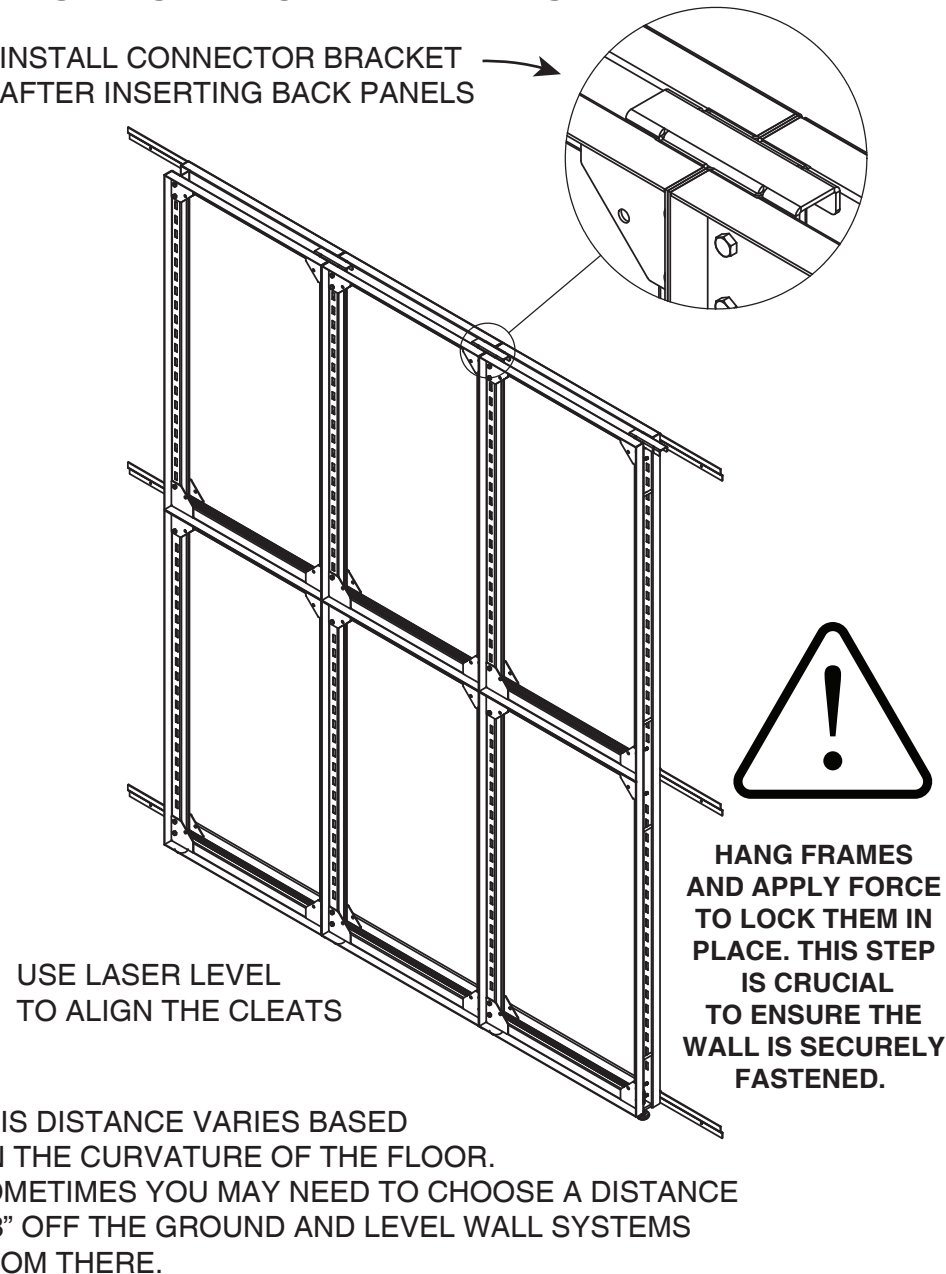

STEP 3: W/ OPTIONAL CROSS BRACES

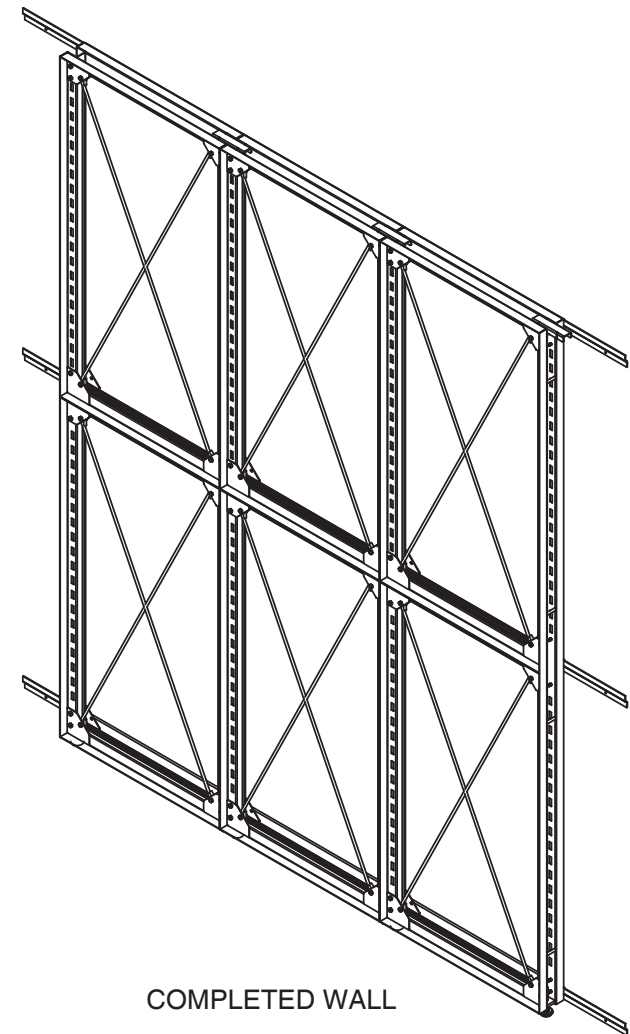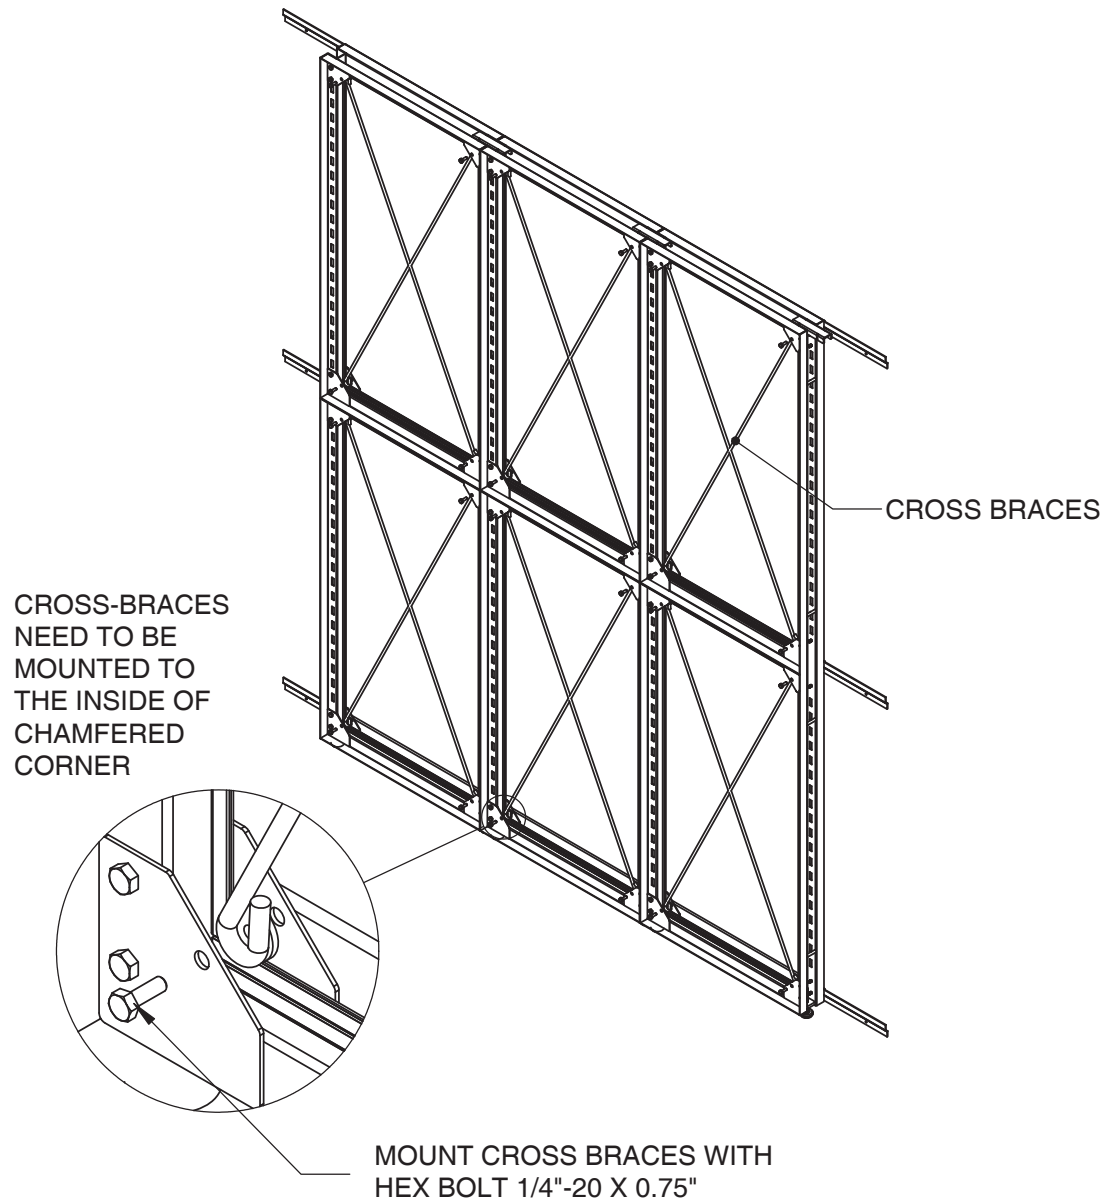

STEP 3: W/ OPTIONAL BACK PANELS

Please note, due to a design limitation, cross-braces cannot be used in combination with back panels. This issue will be resolved in the next version.

